

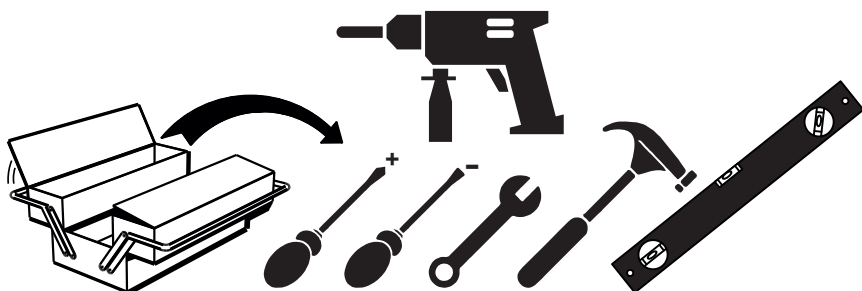
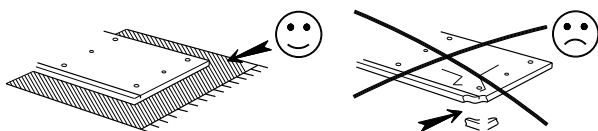


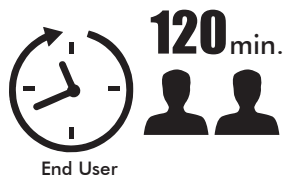


MULTIMO

753- SIMPLE 140

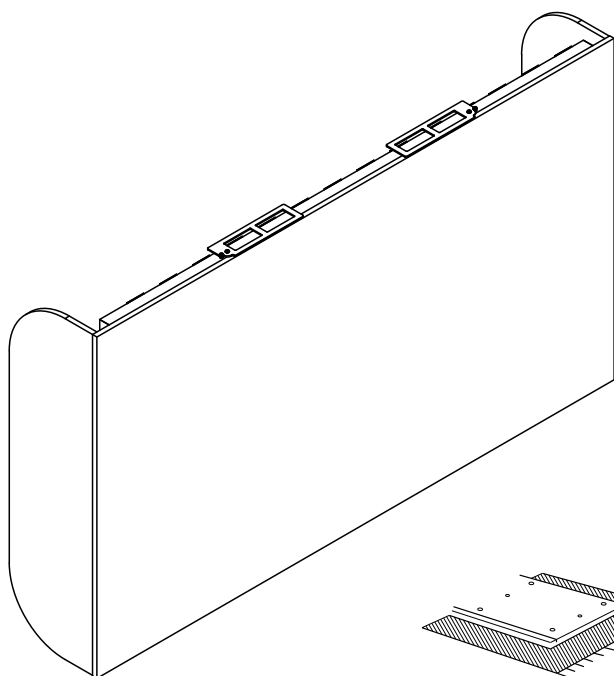

VIDEO














link

Assembly Instructions


Track Title	Piece	(inch)			(mm)			
		Thickness	Length	Width	Piece	Thick	Height	Most
A	2	0,71	55,91	13,58	2	18	1420	345
C	1	3,15	84,17	55,98	1	80	2138	1422

Accessories List

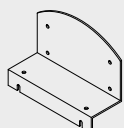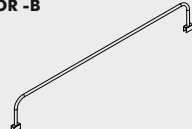MXN 02  12 / piece	MNG - 01  12 / piece	KVL 01  10 / piece	TAP - 01  12 / piece
SG - 01  4 / piece	CTM - 04 (8x25) mm  4 / piece	CTA - 01 (8x15) mm  8 / piece	PL - 04 (5x12x0,7) mm  4 / piece
IM - 02 (6x20) mm  8 / piece	VTB - 01 (4,8x16) mm  16 / piece	TFC - 01(8x70) mm  12 / piece	DD - 01 (R10)  12 / piece
BJA - 01  2 / piece	RYSB - 01 (3,9x16) mm  4 / piece	SC-78  4 / piece	AMR 03 (800 N)  2 / piece
SC-79  2 / piece	KOR -B  1 / piece	KCE - 01  4 / piece	
AL - 02 (5MM)  1 / piece	AL - 01 (4MM)  1 / piece		

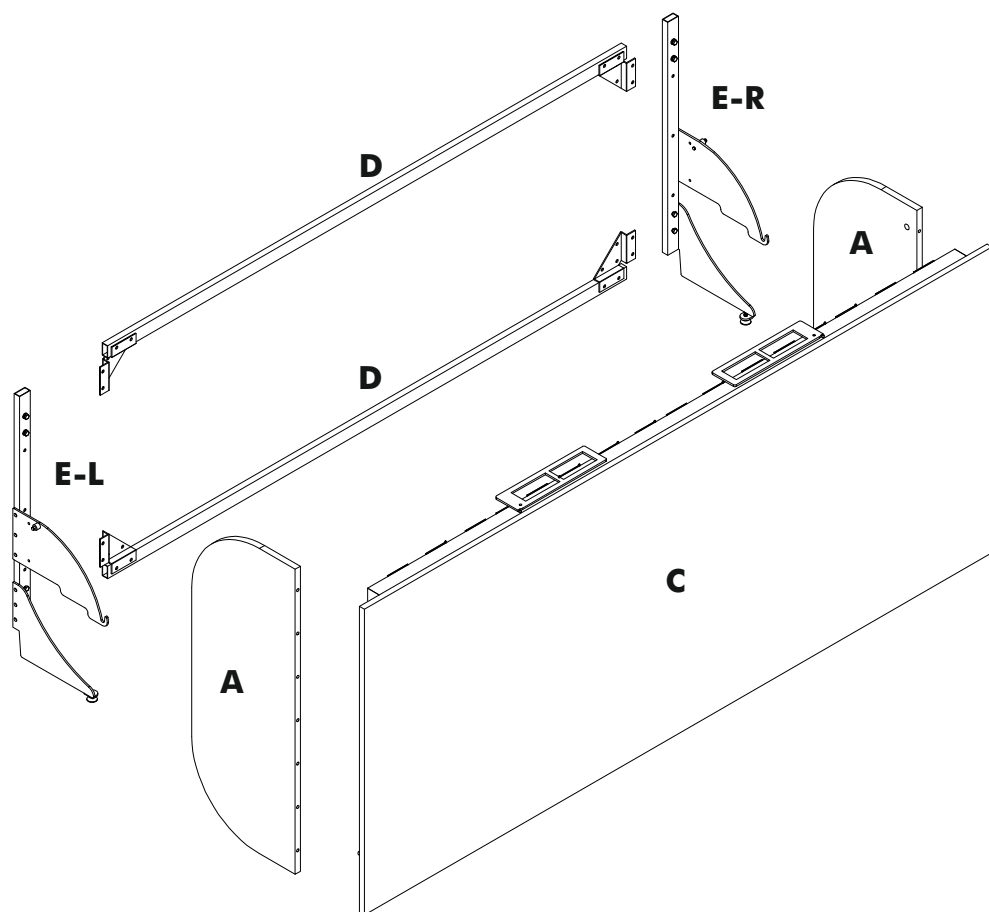


STEP 1

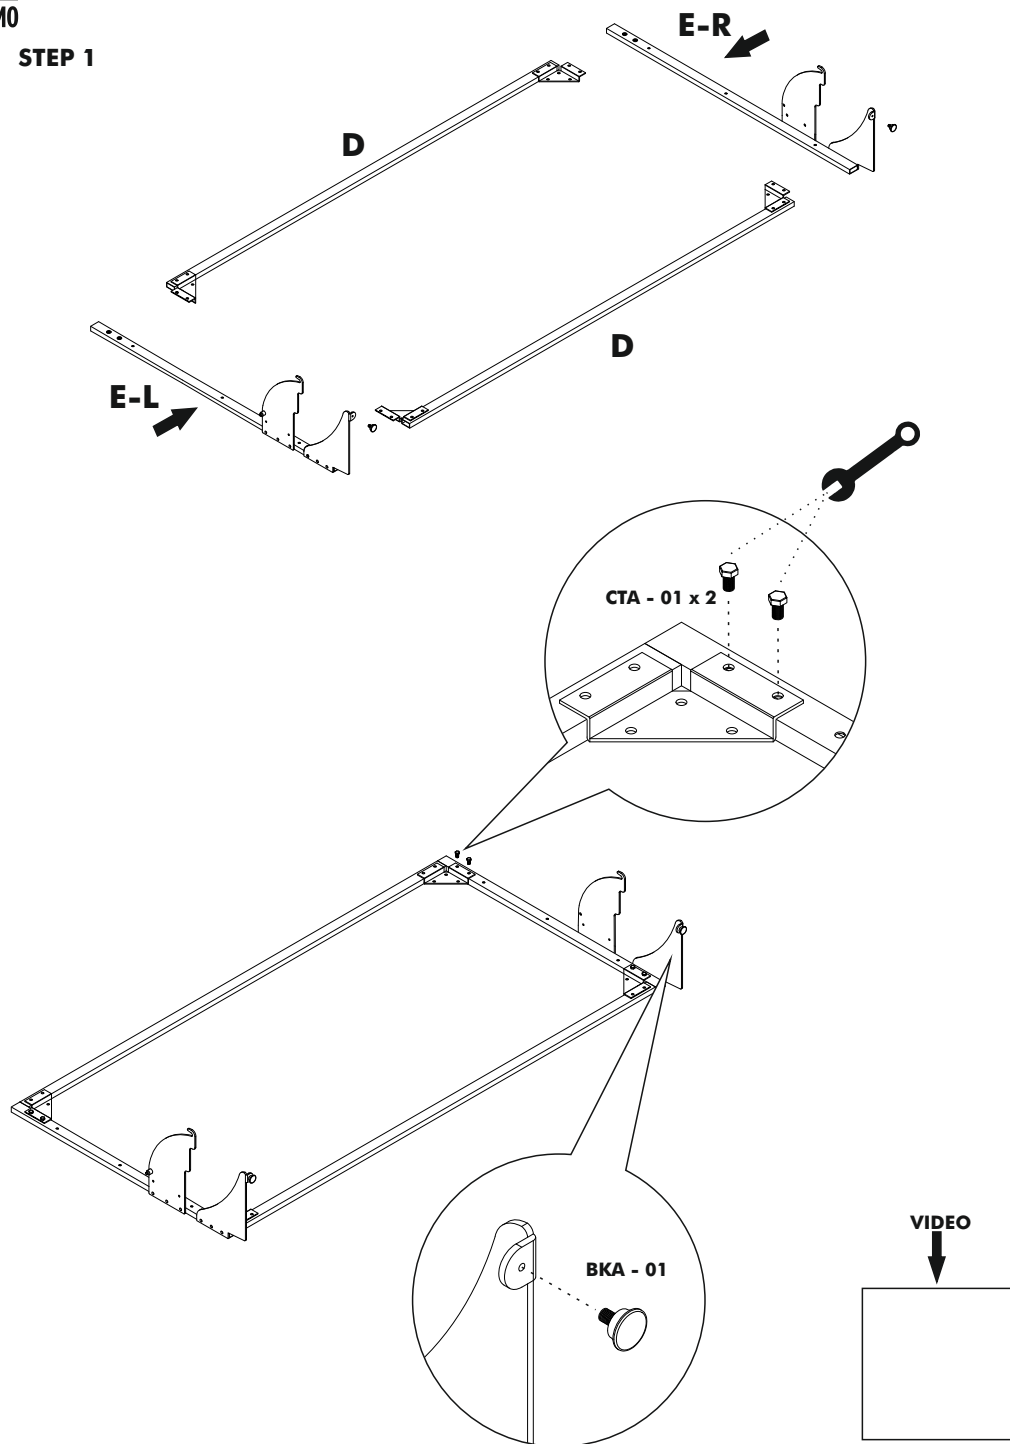


ATTENTION!!!

Should be mounted to strong walls such as concrete, brick or ytong.
This product must not assembly to drywalls.


STEP 2

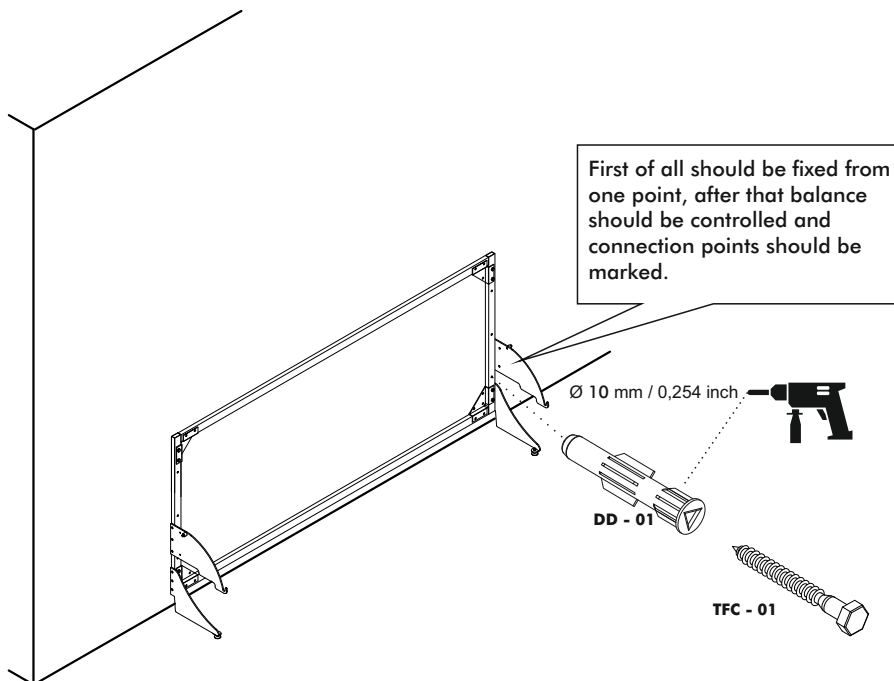


STEP 3

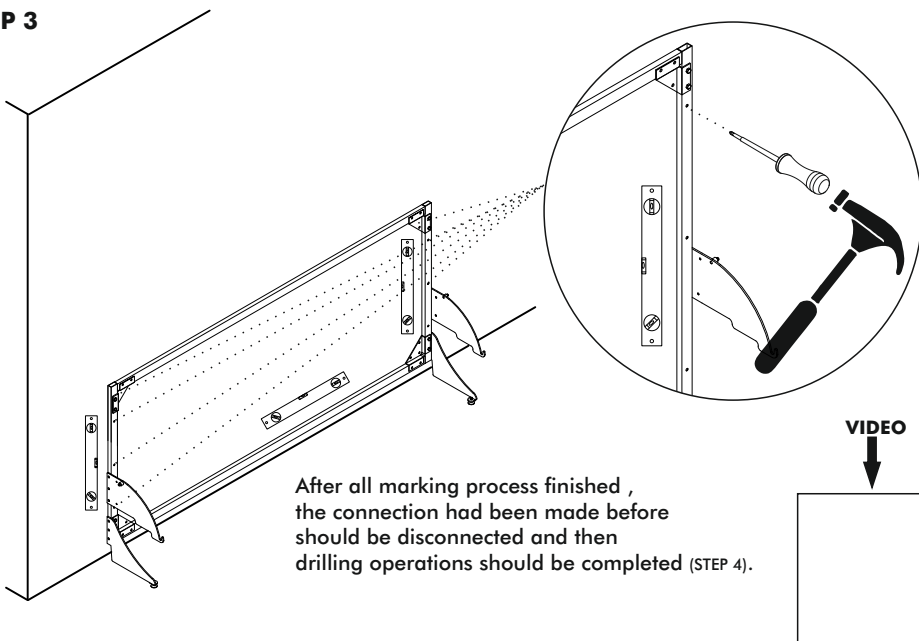


STEP 4

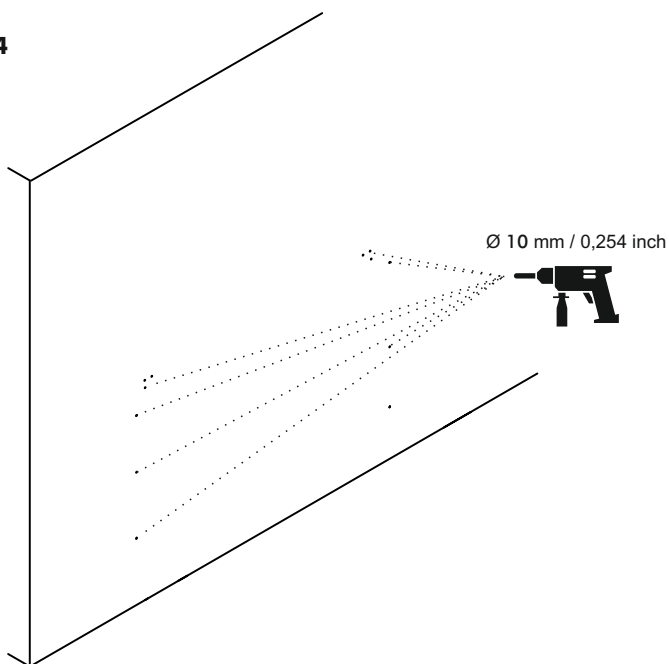

STEP 5

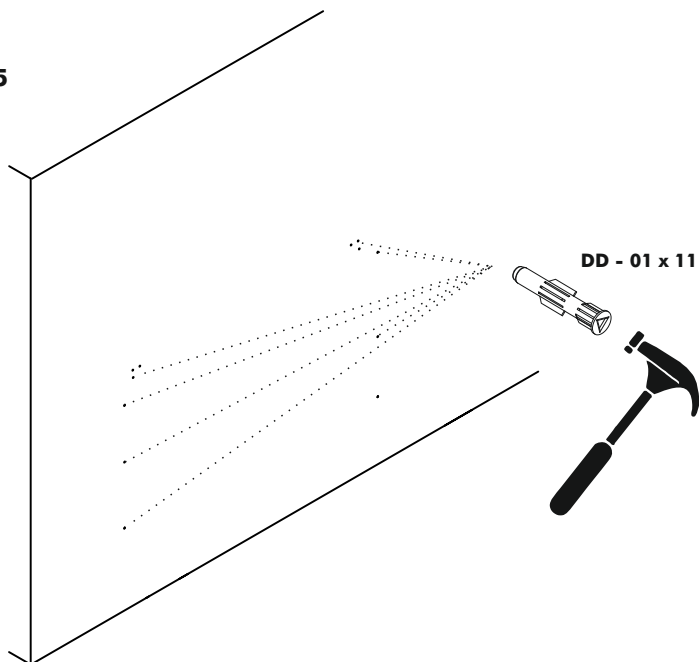


VIDEO

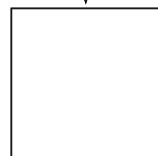


link

STEP 6

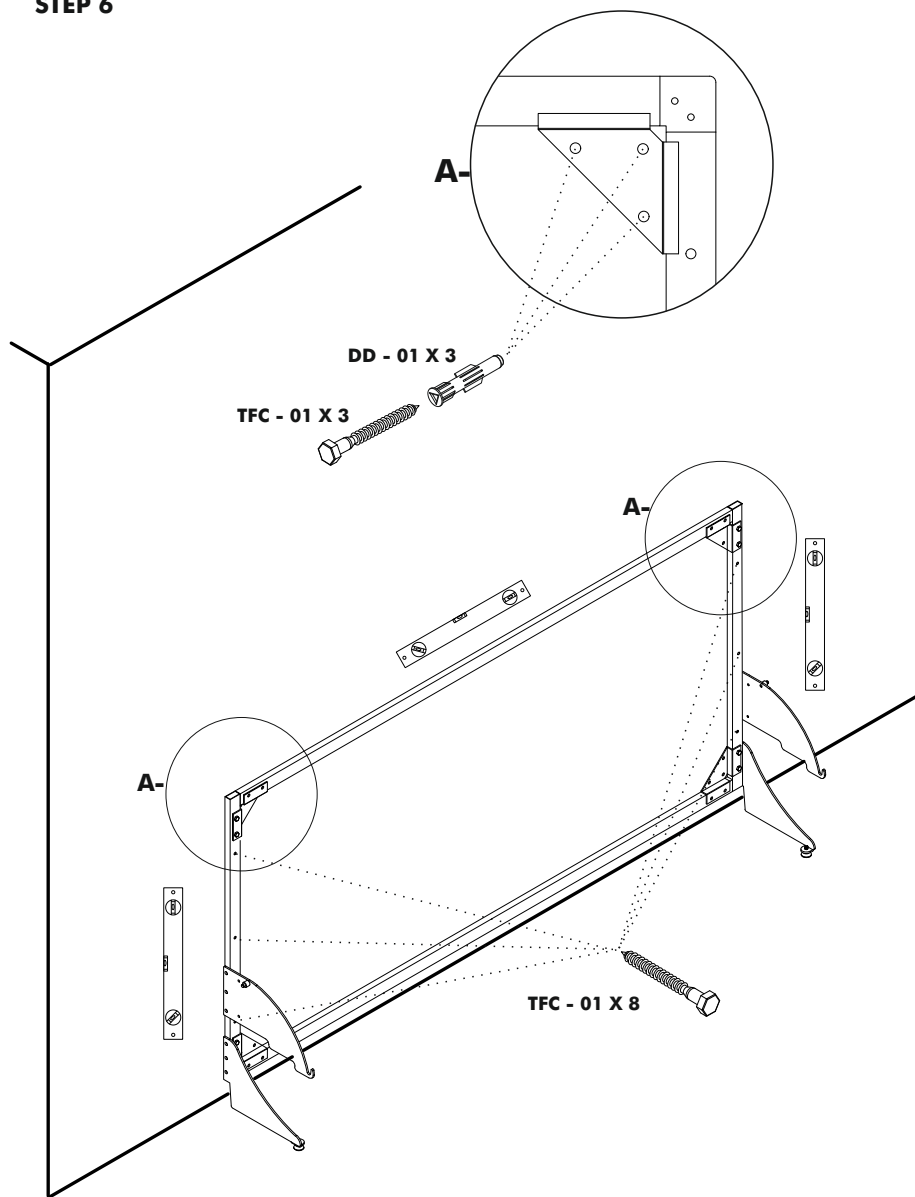

VIDEO


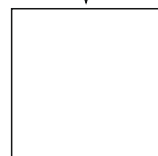


link


STEP 7



210°


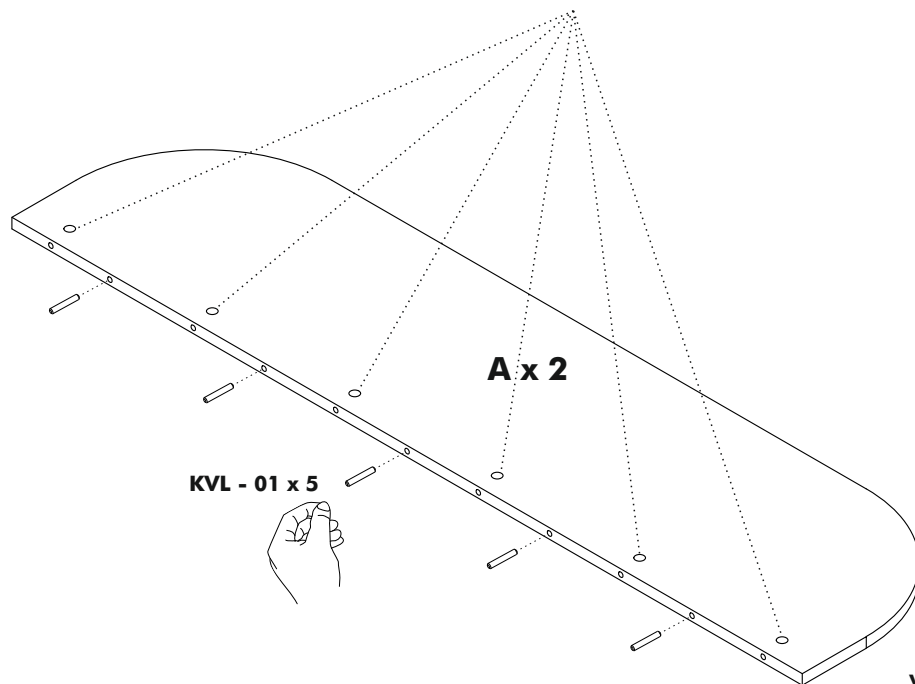
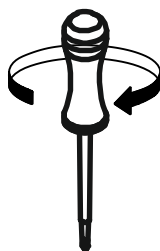


VIDEO


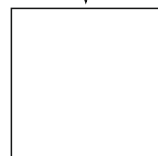


link


STEP 8

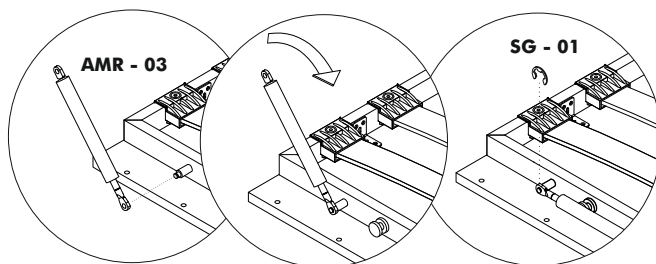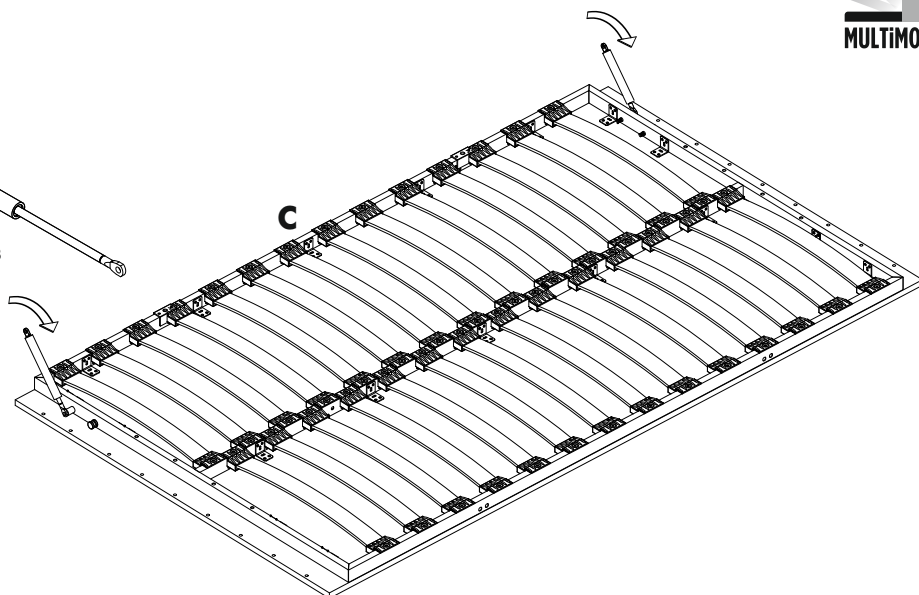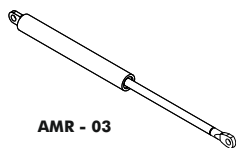

STEP 9

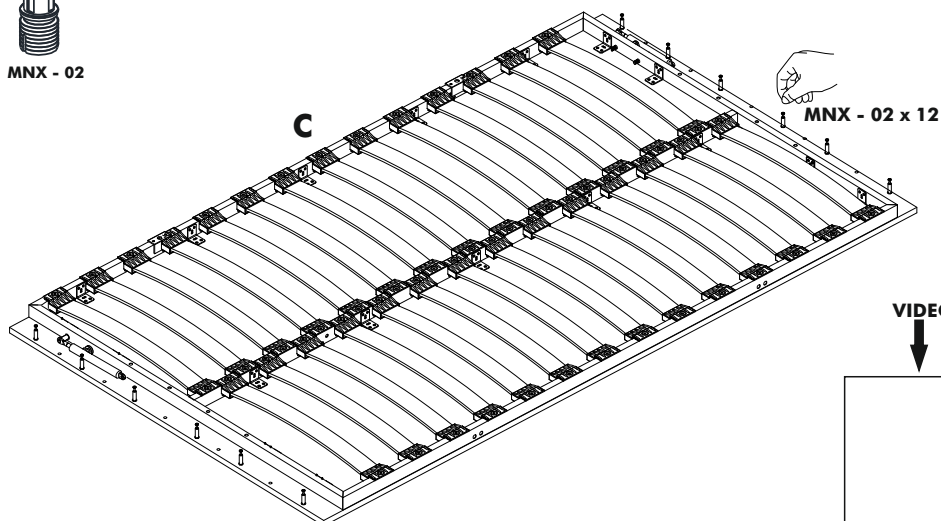




VIDEO

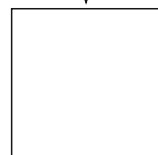


link

STEP 10

C




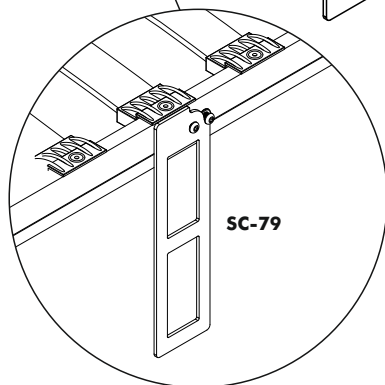
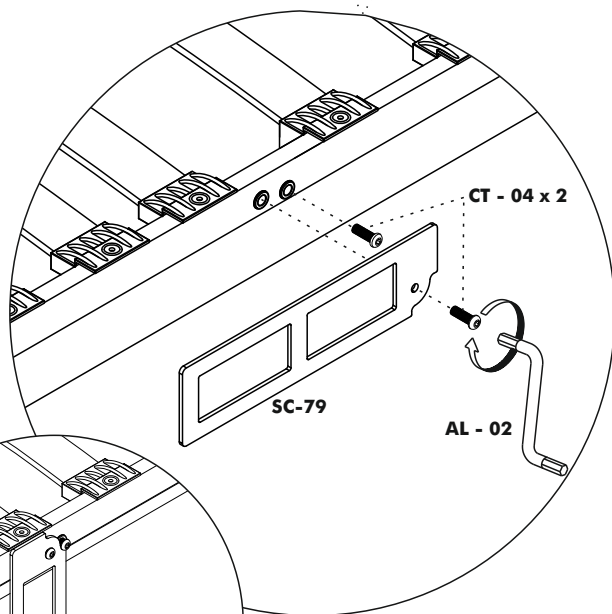
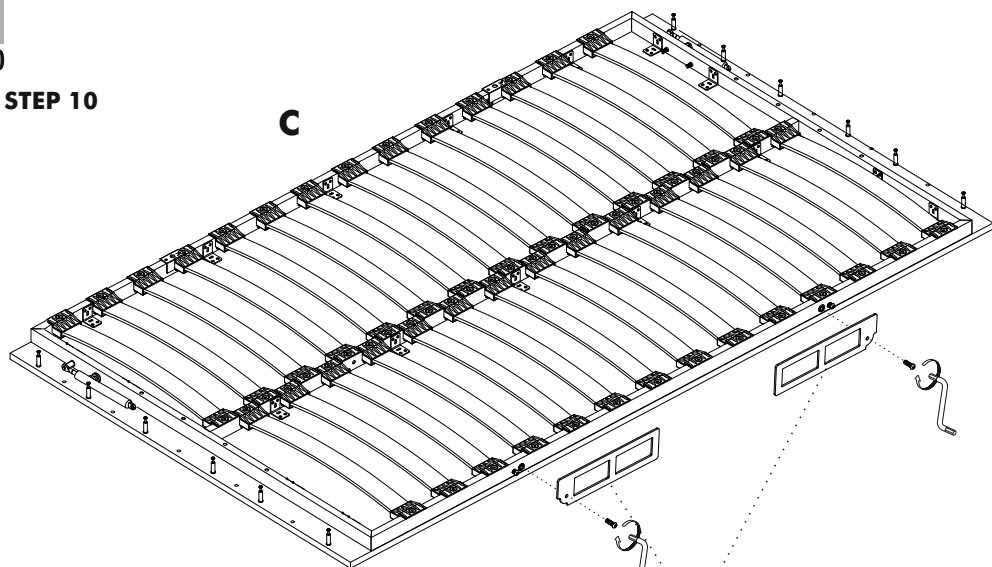


VIDEO

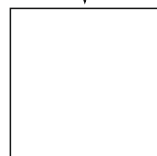


link

STEP 11

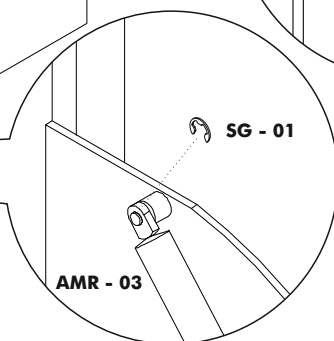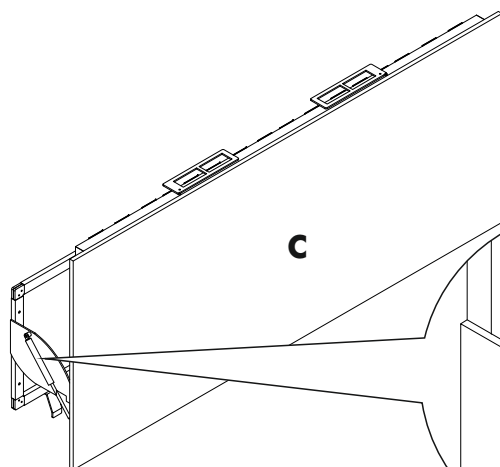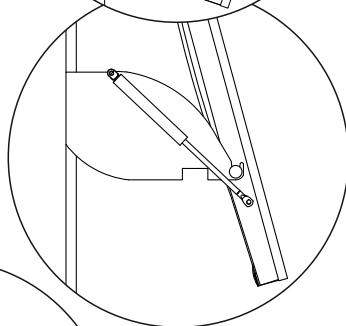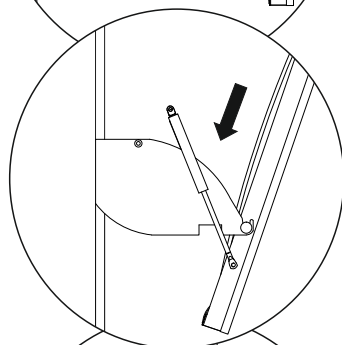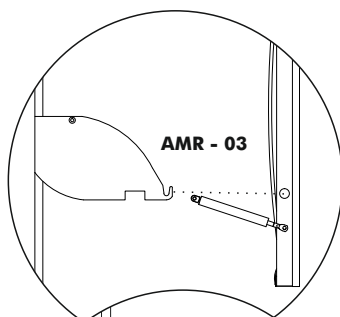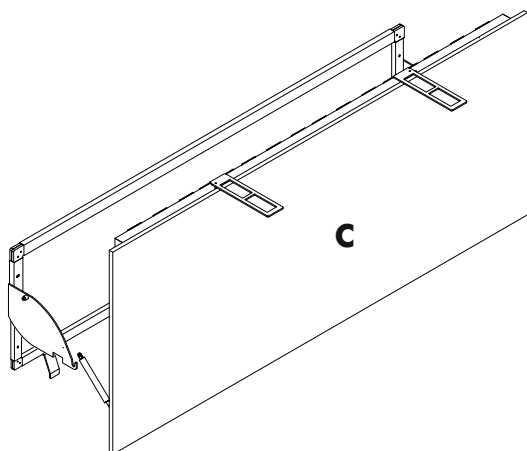


VIDEO


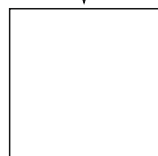


link


STEP 12

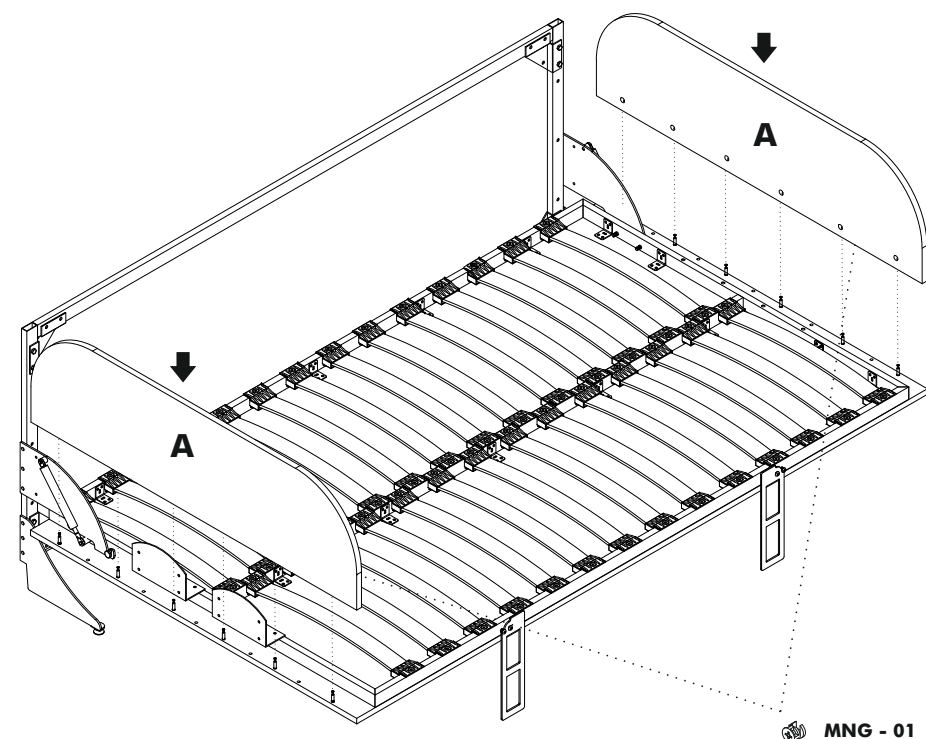


210°

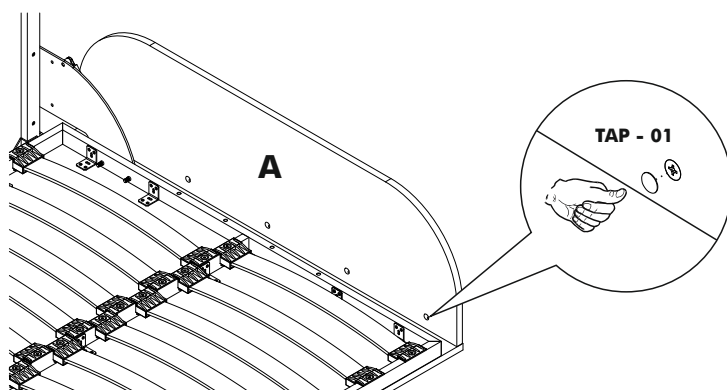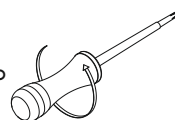


VIDEO

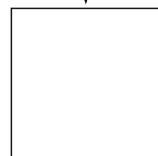


STEP 13

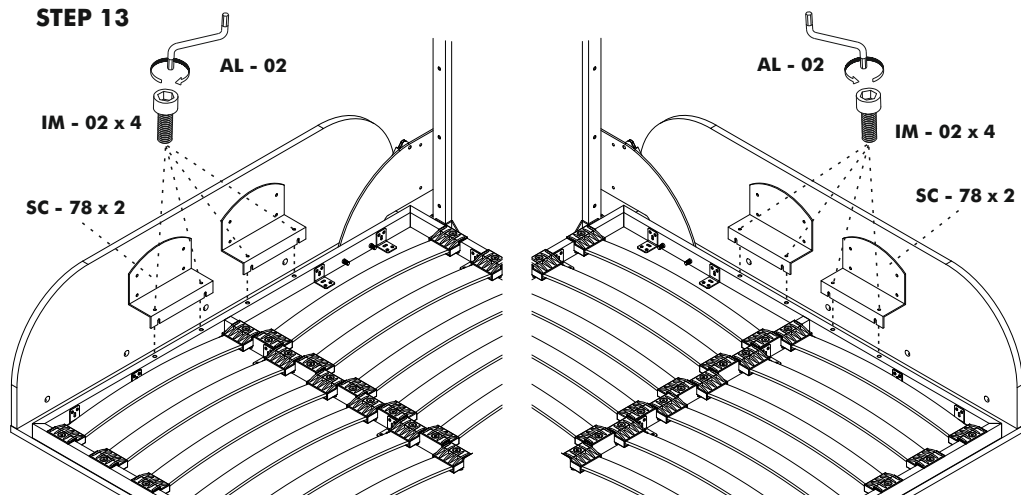

STEP 14

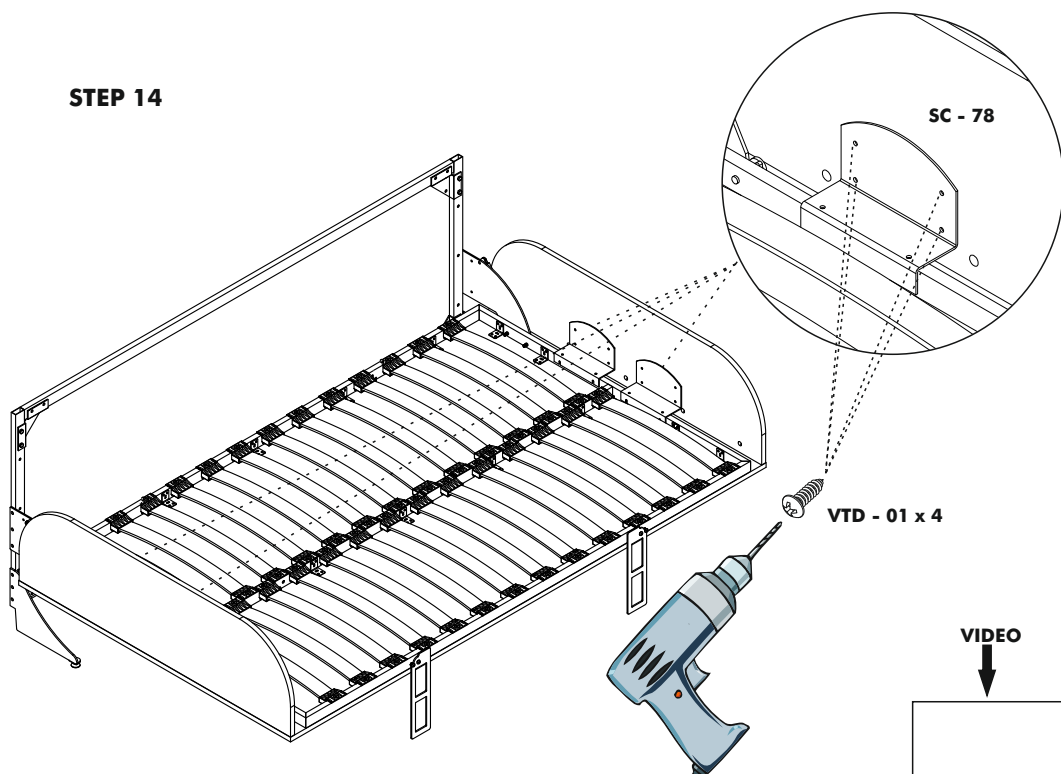


VIDEO

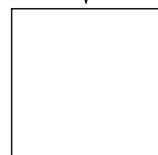


link

STEP 15

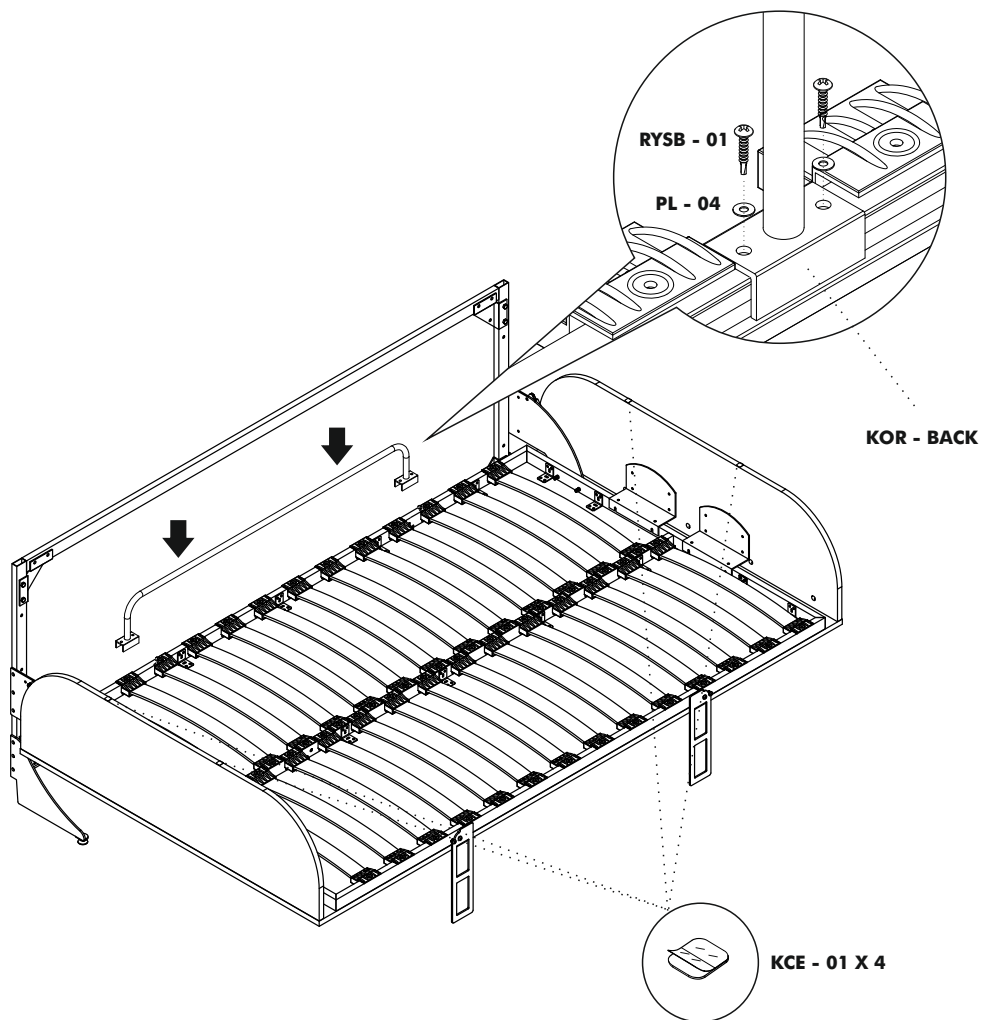

VIDEO

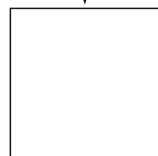

link

ATTENTION / HOW TO / READ ME / OWNER'S GUIDE

1. When mounting on a regular drywall, furniture must be fastened to wood or metal studs. Solid walls made of brick, concrete or similar strong material are also acceptable. Do not mount furniture to paper-mache or sheet rock like material without properly attaching to stud.
2. For safety and product longevity you must periodically inspect the mounting and mechanical connections for integrity and tightness. Confirm hardware remains properly affixed and connections snug.
3. Wall Bed mattress thickness may not exceed 8 inch. Take care to remove pillows and excess blankets before closing. Doing so keeps mechanism free of obstruction and unnecessary stress.
4. Do not lean or rest heavy objects on side or top of furniture. This may cause balance issues and compromise the integrity of your mounting connections.
5. Please use the furniture's beds, desks and shelving as intended. Not designed to be sat, stood, leaned, jumped (etc) on. Improper use may cause personal injury and damage to property.
6. With seasonal humidity change you must inspect interior and exterior of furniture.
7. Single, Twin, Twin XL beds accommodate the weight of one person. Improperly sleeping more than one person risks injury to person and damage to property.
8. Before any un-mounting or disassembly please contact Multimo for technical support and instruction. Failure to properly detach risks injury to person and damage to property.
9. For Bunk Beds:
 - a. Always use provided ladder when accessing top bunk.
 - b. Be slow, careful and aware of surroundings when opening top bunk.
 - c. Do not horseplay. Beds are to be slept on only.
 - d. Some have legs that fully extend when open- be aware of where the leg is and will be.



MULTiMO

www.multimo.com